

Coop Bot



Flexible Parts and Cable Management Guide

Overview

- The building instructions for Coop Bot do not include flexible elements (cables and rubber-bands).
- You can use the images in this guide to help you
- It is important to manage your cables as you build
- Parts of the robot have been removed in order to show you where the cables can go.


Sides

Make use of available space and wire holders

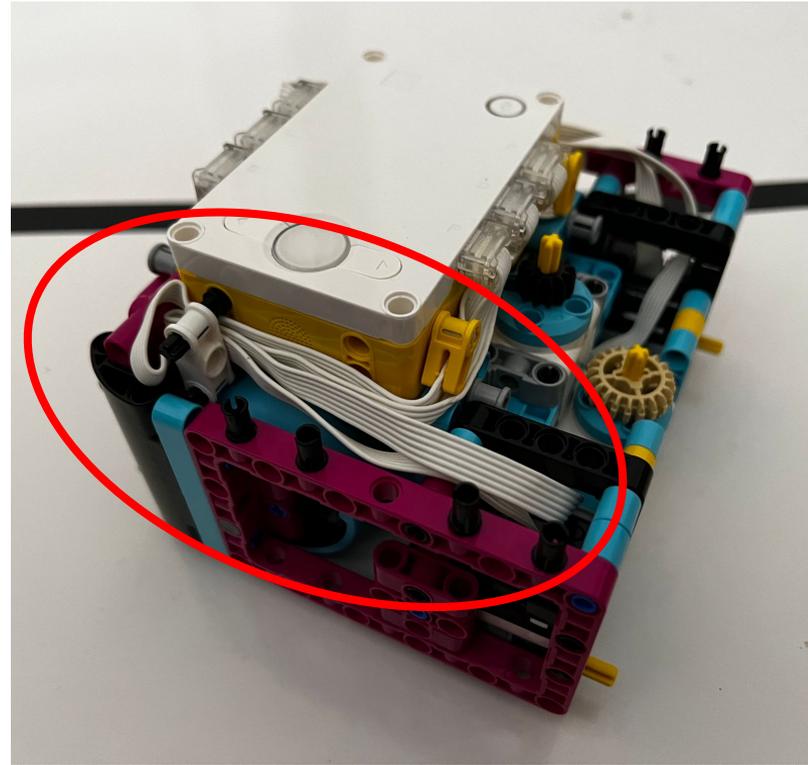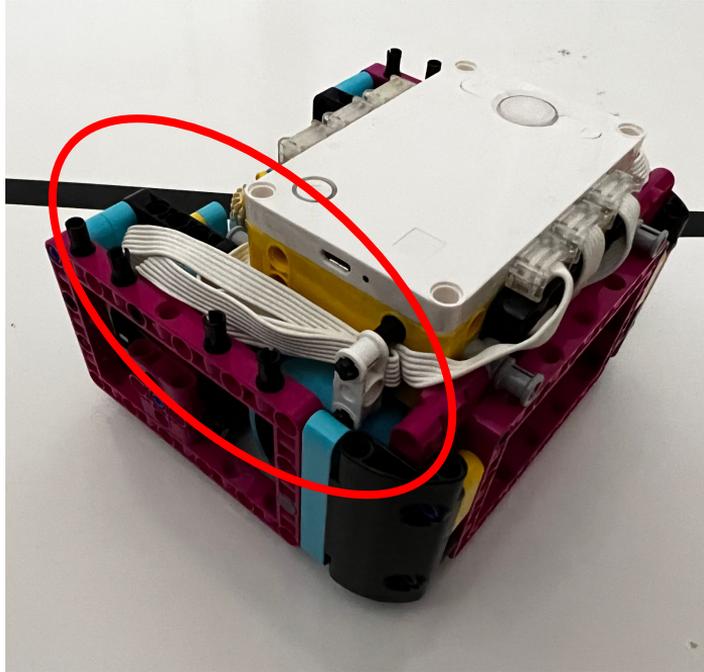


Bottom

Notice the cable neatly organized in the available space

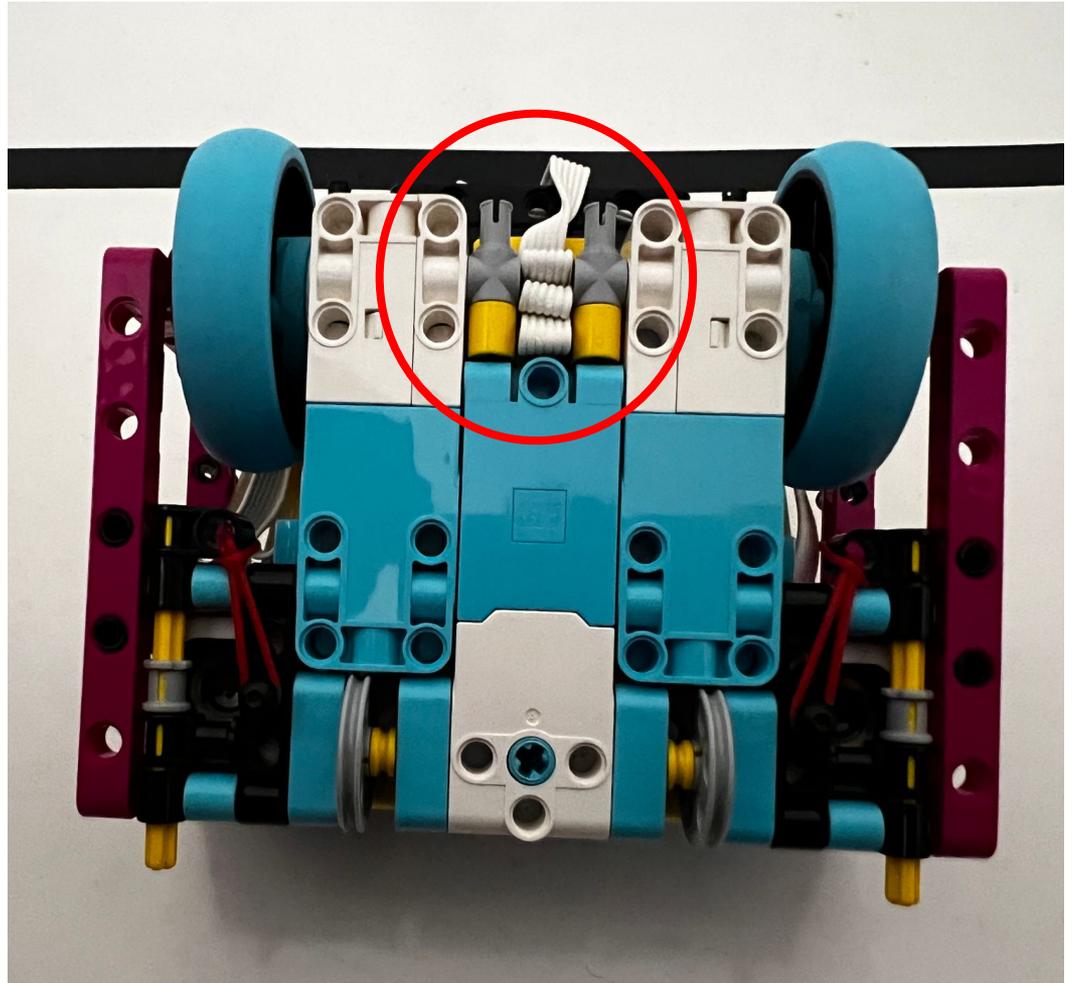


Rear

Notice the cables are neatly folded into the available space

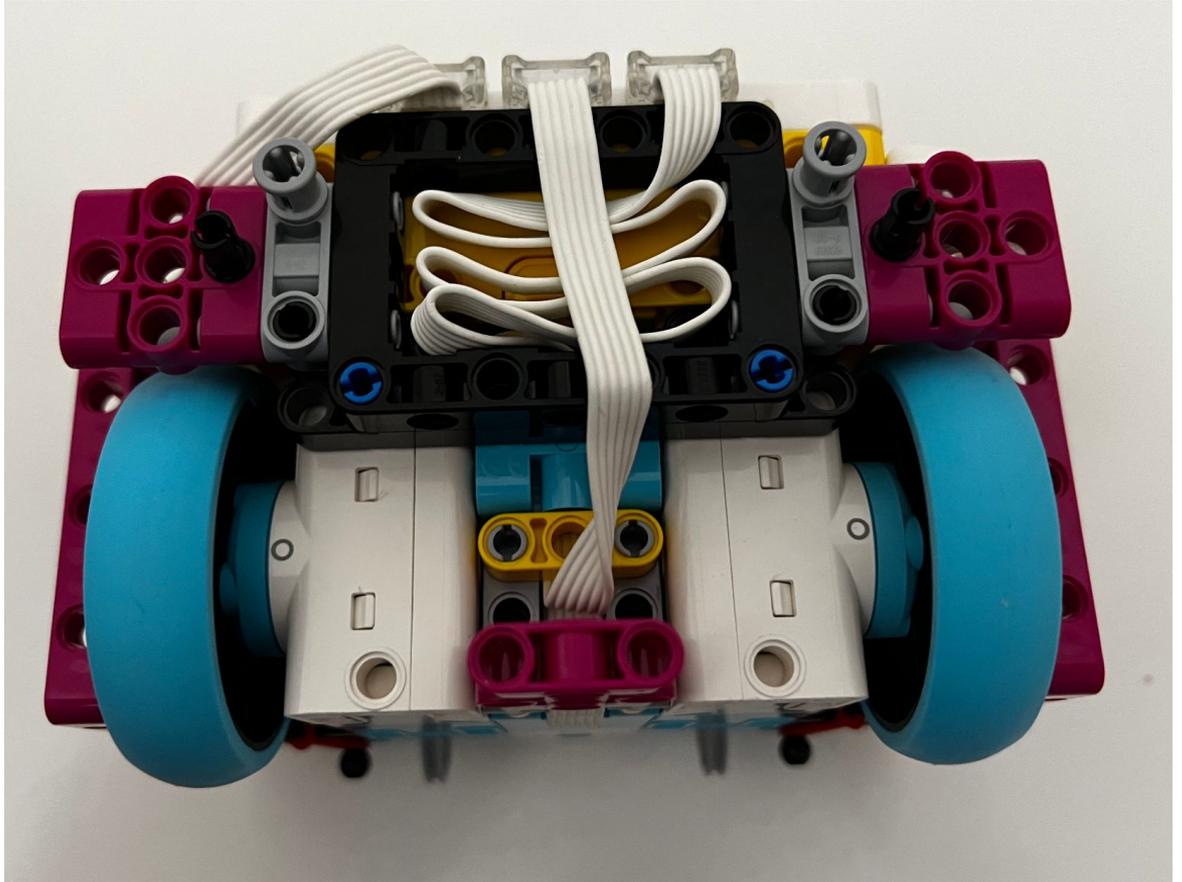


Rubberband

1. Loop the red rubber band around the first black element
2. Hook the other end on to the second

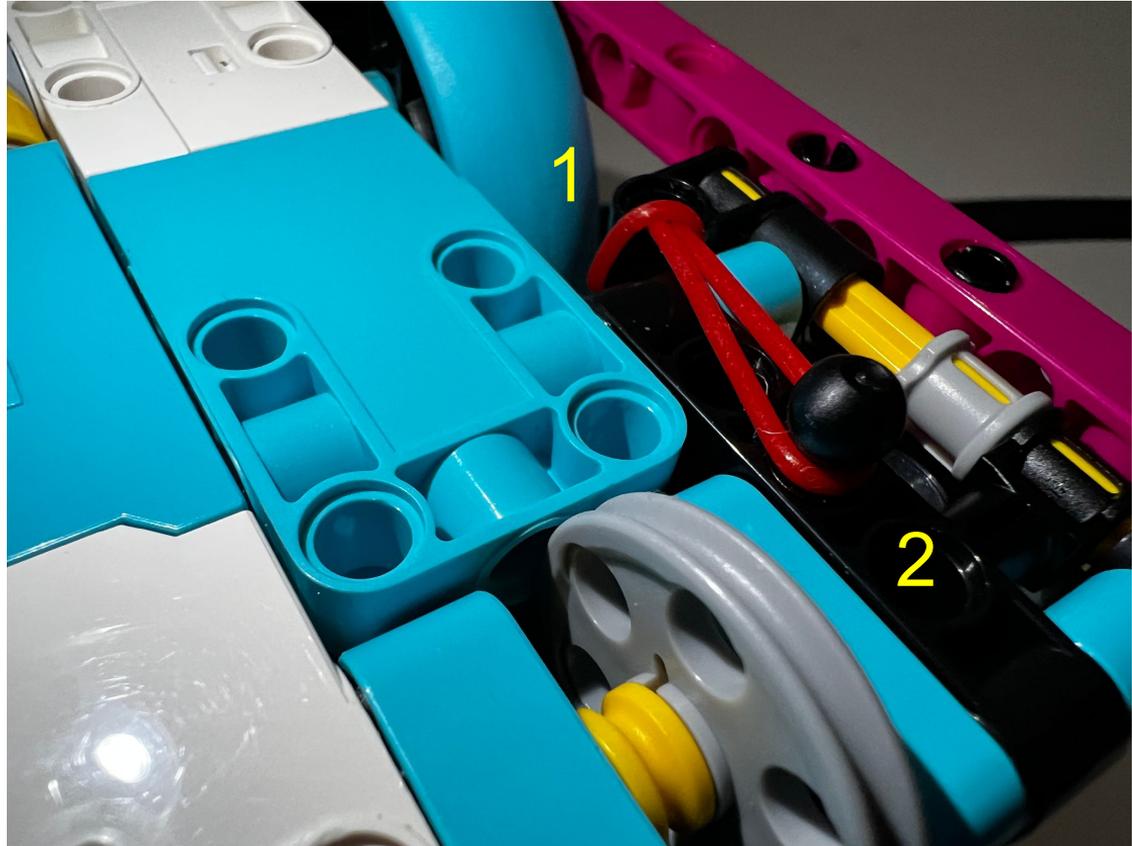

Finished Robot

CAD File

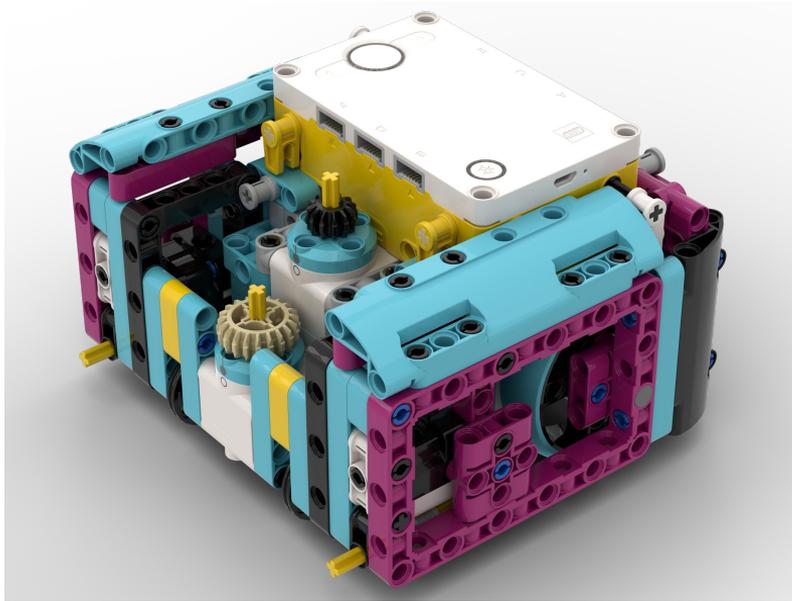

Actual Robot with cables: The cables should not protrude in the front so that the attachment can fit easily.

